

Instruction Manual




220-240V~, 50/60Hz, 300-450W

Flying Electronic Co., Ltd

Room 106, No.139, Lichang Street, Wenchang Garden, Liyue, Jiangmen City,
Guangdong Province, P.R., China

YX-CP10S

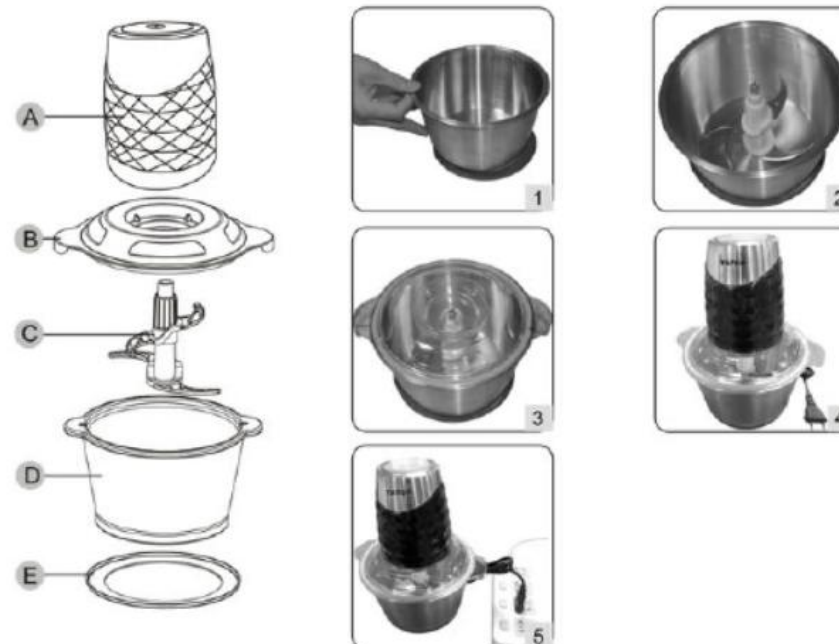

Maximum operating time: 5 cycles (30 seconds on / at least 30 seconds off). After 5 cycles you must leave the appliance to cool down for 10 minutes before its next use.

NOTICE:

- 1) .This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- 2). Children should be supervised to ensure that they do not play with the appliance.

A. MOTOR

B. LID

C. KNIFE

D. STAINLESS STEEL CONTAINER

E. ANTI-SKID RING

3).USE:

A:Put the stainless steel container onto antiskid pad;

B:Assembling the blades to stainless steel container;

C:Put the food materials into the stainless steel container and then lid onto it as picture;

D:Put the motor at the right position;

E:Turn on it after above steps confirmed.

4). Cleaning:

Motor: Do not put the motor into water.

Clean it by using we sponge.

Knife: Press the button and take out the knife to clean carefully.

Don't take the razor blade out.

Clean it carefully for the razor blade is very sharp.

Containing bowl, containing plate, bottom.

5). Deviled for collecting wires:

Wind the wire into the stop attention.

Please check whether the Regular Voltage and power are the same as that on the appliance when you use it at first.

Do not put the appliance near the source of heat, or it will be damaged.

Put the appliance on a smooth surface and far away water,

Do not open the cape until the razor blade stop whirling.

Clean or maintain it after cutting off the electricity.

Do not use the appliance when the razor blade is corrupted or, the appliance of wires is worn out.

6).This appliance is only used in families. The producer will not take any responsibility to the accident caused by mistaken using.

A reference for stirring time of various foods

Food	quantity	blend time
Onion(quartered)	100g	6 second
Garlic(whole cloves)	80/100g	5 second
Celery	15g	10 second
Junket	40g	14 second
Biscuit	20g	15 second
Ham	40g	10 second
Meat (pork& beef)	80/100g	12 second
Preserved fruit (carrots)	approx.2cm cubes	15 second
	200g	
	Cut inpieces	
Sauce	150g	20 second

Continuously using the appliance is not allowed.

If the razor blade whirls slower stop using it at once, or reduce some food if overload.

If such case happened, please stop using at once and send it to special department to repair.

ELECTRICAL SAFETY

- This appliance is intended only for household use .
- The appliance is only intended for the purpose described in user manual. Do not use appliance or any part of the appliance out of the intended use to avoid risk.
- The use of attachments which are not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance
- Be careful if hot liquid is poured into the container as it can be ejected out of the appliance due to a sudden steaming.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Appliances shall be potential injury from misuse.
- Clean surfaces in contact with food, please see the chapter "CLEANING".
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Connect the appliance only to a properly installed wall socket with a voltage matching the technical data of the appliance. Make sure that the connections do not become a stumbling trap.
- The motor must not come into contact with water or any other liquid, as there is the danger of an electric shock. Therefore, do not use the appliance near to a wash basin, not with wet hands or while standing on a wet ground. If the appliance has turned wet. Pull the mains plug immediately out of the socket before touching the appliance.
- Never leave the appliance unattended connected to the mains! Always pull the plug out of the socket when you do not use the appliance, even if it is only for a brief moment.
- Keep children away from the appliance.
- Keep the appliance and the connection cord away from heat, direct sunlight humidity, sharp edges and similar.
- Always pull the plug out of the socket, if you do not use the appliance, when inserting or taking out accessories, when cleaning it or if any disturbance occurs.
- Always pull by the plug-not by the cord.
- Do not remove the lid while the appliance is switched on.
- The knives keep running a little after switching off the appliance. Wait until they stand still before touching them.
- The knives are very sharp. Care shall be taken when handling the sharp cutting blades, emptying the container and during cleaning.
- The appliance is designed for processing household quantities; it is not suitable for commercial purposes. Use the appliance only for the purpose it was designed for.
- When passing on the appliance to a third person, make sure to include these instructions for use.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To your use device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling