

DigitalCooking Thermometer/Timer-Operating Instruction

SPECIFICATION

- 1.Measuring temperature range:0°C~250°C (32°F~482°F)
- 2.Temperature accuracy:±1°C (0°C~100°C) , ±1.5°C(101°C~250°C)
- 3.Temperature display resolution:0.1°C (0.2°F)
- 4.Timer range:99MIN 59SEC
- 5.Timer alarm function
- 6.High temperature alarm function
- 7.°C/°F switch
- 8.Battery:1PC x1.5VOLT AAA

INSTRUMENT OPERATION

1.COOK/TIMER button

- Push **COOK/TIMER** button to switch between cook and timer mode.
- In timer mode,press **SEC** and **MIN button** to set countdown time.
- To start and stop the timer, press **S/S**.
- To reset the timer, press and hold **MIN** and **SEC simultaneously**.

2.▲button

- In **COOK** mode,press **▲**button to raise alarm temperature.

3.▼button

- In **COOK** mode,press **▼**button to lower alarm temperature.

4.°C/°F

Press°**C/°F** button at front of the unit to switch between Centigrade and Fahrenheit.

- 5.Inset the probe into the cooked food. When temperature of the food reached the set temperature the thermometer will alarm.

BATTERY REPLACEMENT

Replace the battery when the display dims, using AAA 1.5V battery.

NOTICE:

- Never use the thermometer in the closed oven.
- Clean the sensor thoroughly after each use.
- The thermometer is not water proof.Don't immerse the whole product into water.
Only clean it with a damp cloth.