
Product Manual

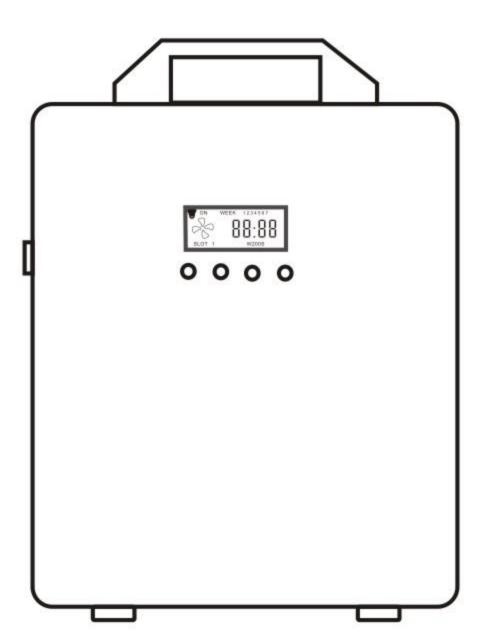

App download



APP icon:



Notice: IOS users search Aroma IOT on the Apple Store to download. Android users scan the QR code to download, IOS users also can scan to download.

Tips

Press and hold [MODE] 10 seconds, WIFI logo appears, then press 3 seconds the WIFI logo flash slow, then start configure WIFI by Compatibility Mode. Press 3 seconds again it flash very fast, then start configure by One -Click Mode.

After connected (if not disconnected), the WIFI logo will always be displayed.

Press 3 seconds again exit WIFI configure then WIFI logo is not displayed.

88:88 8:000 0 0 0 0

WIFI configure remind:


- 1. WIFI password is correct, if no password just click confirm directly.
- 2. WIFI name can not use Chinese. Not support 5G.
- 3. Mobile GPS is open when configure WIFI.
- 4. Configure the network, recommend One-Click Mode first.

Atomization level and working parameters

Working time /single times (s)	10s-200s (adjustable)
Interval time/single time (s)	10s-200s (adjustable)

Instruction

First step: Press device [MODE] key 10 seconds for distribution network mode.

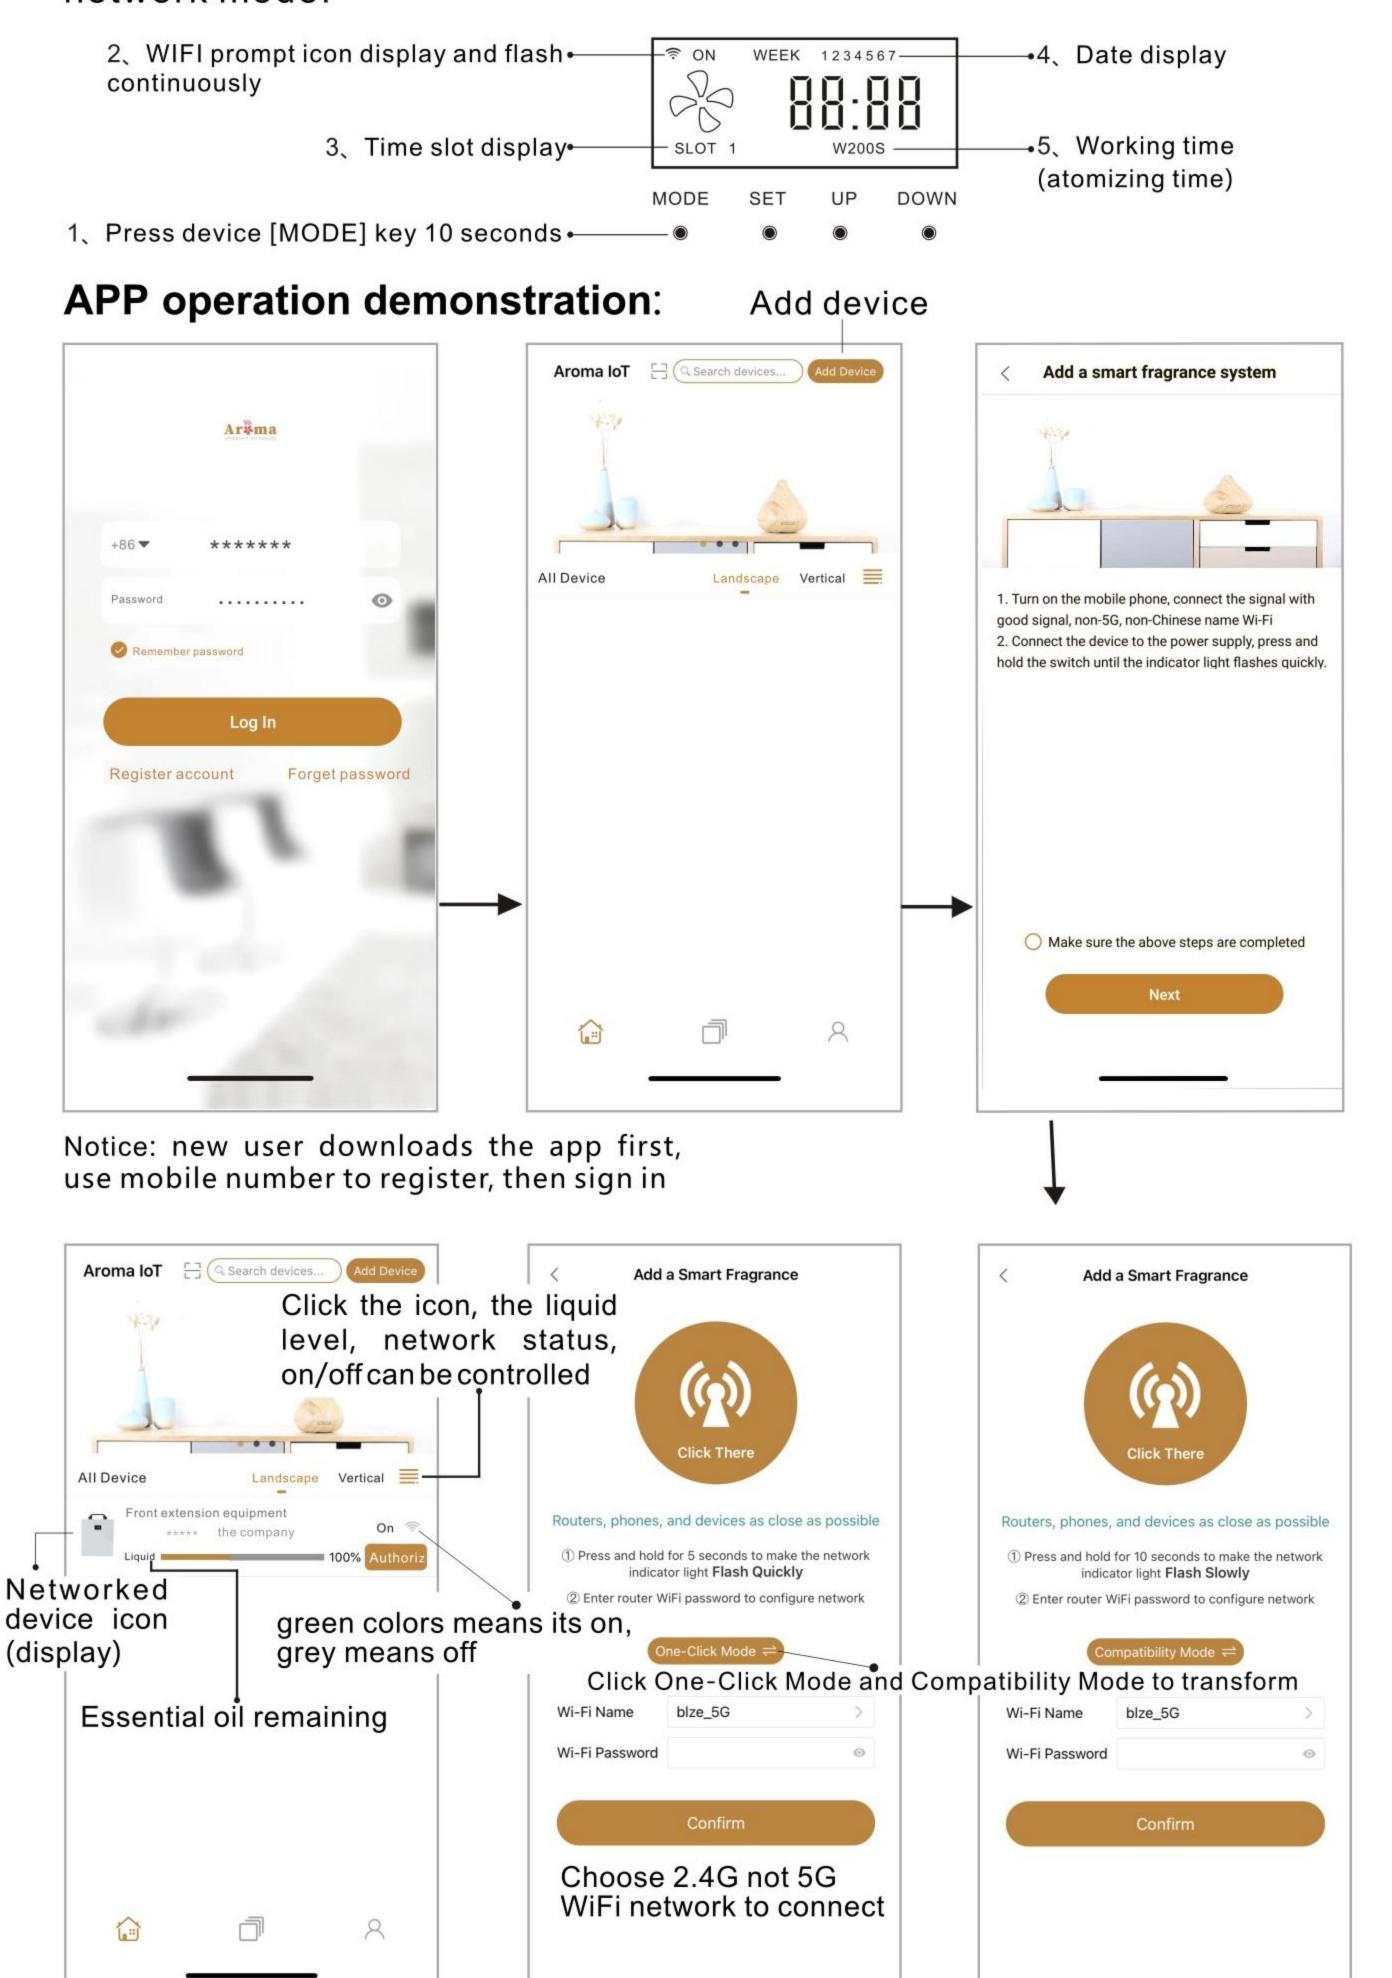

Note:WIFI password should be correct.


If WIFI signal is very well, use One-Click Mode to configure, if WIFI signal not so good use Compatibility Mode, the phone generates a new WIFI hotspot and configure the new WIFI. Re-configure if WIFI connect fail.

APP operation demonstration:




Level reset

Set the running time and pause time from 10-200

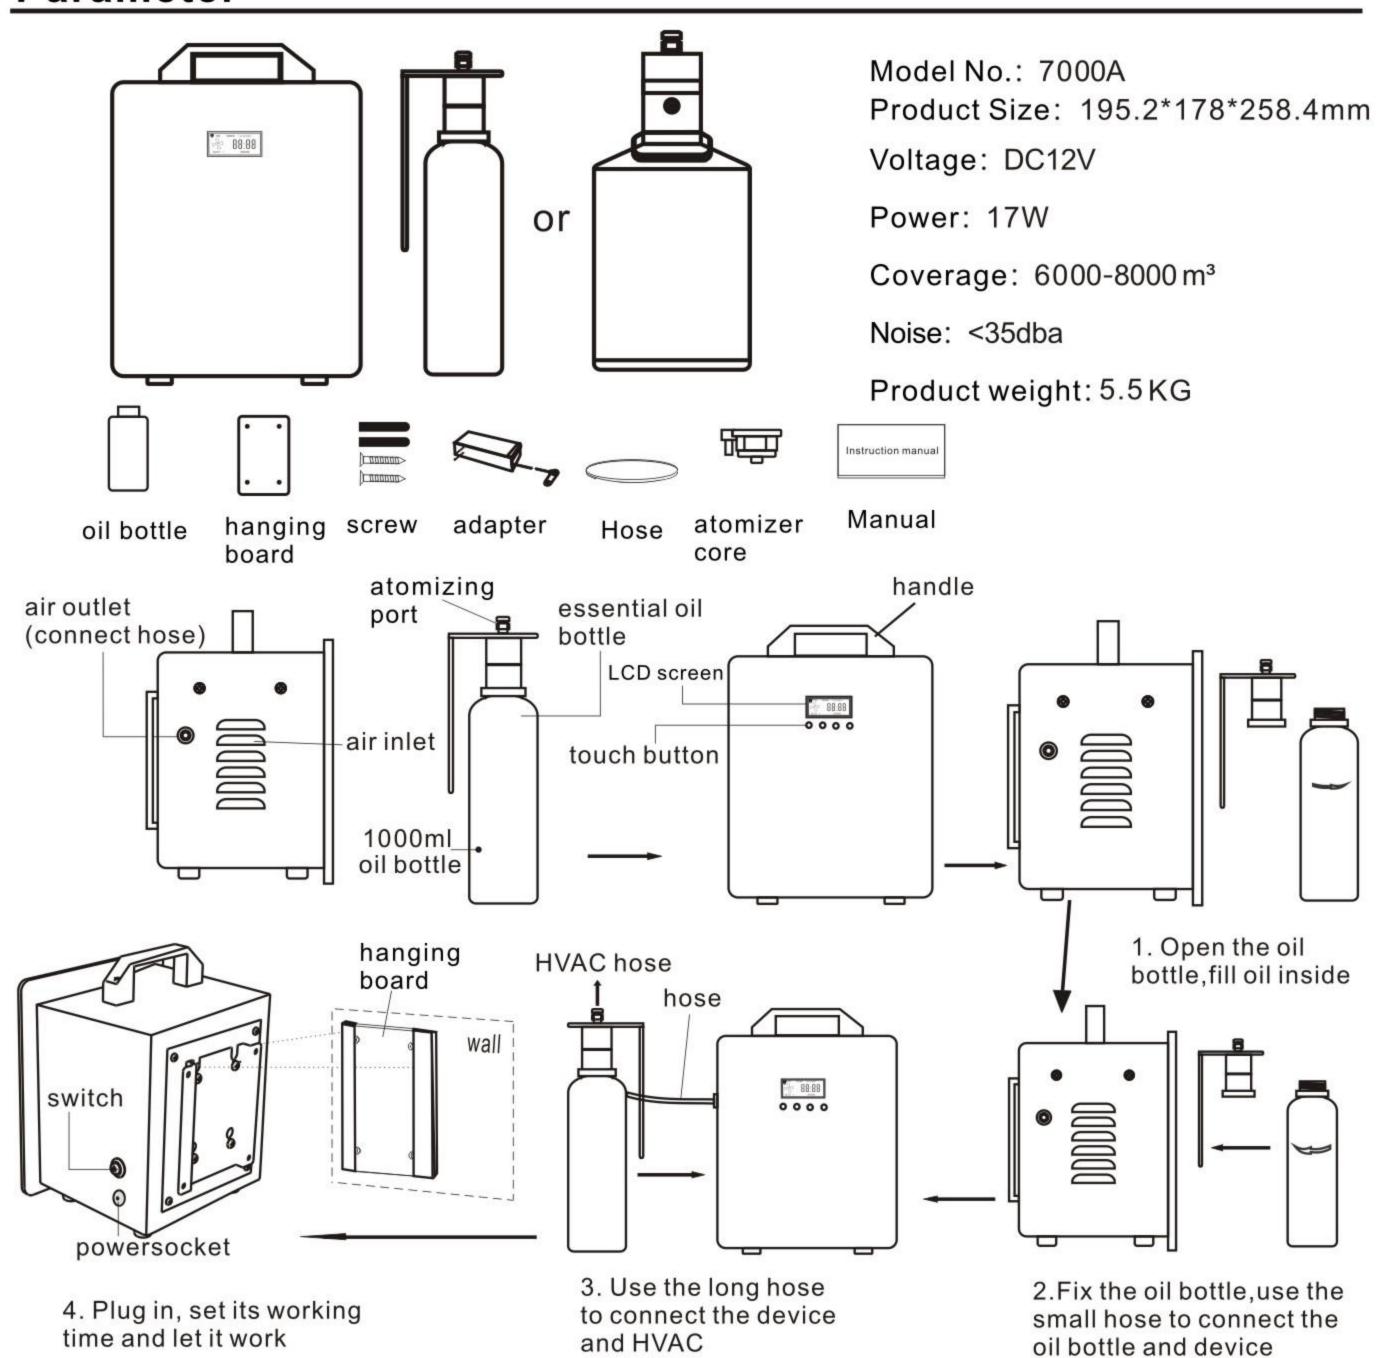

Button operation demonstration:

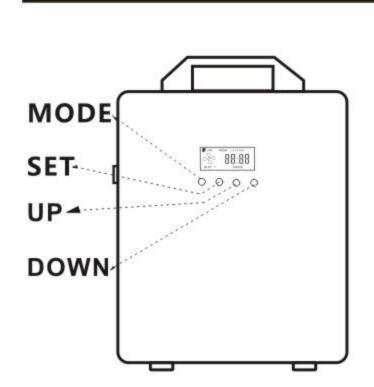

Button function:

[MODE]: long press: 10s for WIFI connecting, short press: enter into timer setting state.

[SET]: long press: control built-in fan start (stop) time (with memory function), short press: enter into timer setting state.

[UP]: long press: test function, air pump and fan run for 15 seconds, short press: timer/time setting "+" function.

[DOWN]: Long press: lock/unlock the device, short press: timer-time setting "-" function.

The device can be set 5 different operating time periods, and the working day can be selected according to multiple options.

[MODE]: Switch for different options, start and stop time for SLOT 1(the first time period), fragrance intensity. Start and stop time for SLOT 2(the second time period), fragrance intensity. Start and stop time for SLOT 3(the third time period), fragrance intensity. Start and stop time for SLOT 4(the forth time period), fragrance intensity. Start and stop time for SLOT 5(the fifty time period), fragrance intensity.WIFI version/long press 10s for WIFI network connecting.

[SET]: Enter the selection setting state, choose the setting content of the currently displayed page; including system time, date, intensity, etc.;

[UP]: adjust upwards, you can adjust the time, fragrance intensity, working date.

[DOWN]: adjustment downwards, you can adjust the time, fragrance intensity, working date.

Device button setting working periods instruction

Press the [MODE] key for the first time, the LCD screen displays [SLOT 1 ON]---start working time for the first time period; press the [SET] key to enter the adjustment state; adjust the hour, minute and the working date group by [UP/DOWN] key;

Press the [MODE] key for the second time, the LCD screen displays [SLOT 1 OFF]---the stop time of the first time period; press the [SET] key to enter the adjustment state; adjust the hour and minute by [UP/DOWN] key;

Press the [MODE] key for the third time, the LCD screen displays [SLOT 1 WEEK]--- continuous working frequency setting. Adjust the working frequency from 10 to 200 by press [UP/DOWN] key, each time pressing it changes ± 10 .

Press the [MODE] key for the fourth time, the LCD screen displays [SLOT 1]-stop working frequency setting, adjust the stop frequency from 10 to 200 seconds by [UP/DOWN] key, each time pressing it changes ± 10 .

Press the [MODE] key for the fifth time, the LCD screen displays [SLOT 2 ON] --- start to working time for the second time period, press the [SET] key to enter the adjustment state; adjust the hour, minute, and the working date group by [UP/DOWN] key;

To continuous setting, same as the above process. Until 5 time periods are finished. Notice:

When setting its working time period, the shutdown time cannot precede the start-up time; If the working time period cross 00:00, it needs to be set for two time periods.

Such as the working time is: 21:00-9:00

It should set 2 times period, the first time period is: 21:00-23:59; the second time period is: 00:01-9:00

Set the device system time:

Adjust the display time of the device to be consistent with the actual local time. The system time is 24H.

To show its state, press the [SET] key, the hour digits on the LCD screen flash, press [UP / DOWN] key to adjust the hour.

[Date option]: You can choose a combination of working days.

(Monday to Sunday) (Monday to Saturday) (Monday to Friday); (Monday) (Tuesday)


(Wednesday) (Thursday) (Friday) (Saturday) (Sunday);


Monday to Wednesday) (Tuesday to Thursday) (Saturday to Sunday); (Monday, Wednesday and Friday) (Tuesday, Thursday and Saturday)




Warning

- 1. After installation, please keep the machine vertical. Leaning or Flipping will cause oil leakage and damage the machine.
- 2. If you are not a technician, you must not modify, disassemble or repair the device. If the device breaks down, please contact our technical staff in time.

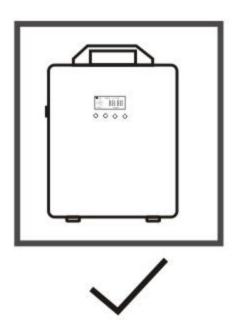

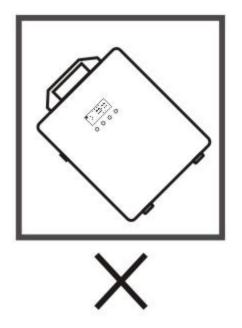

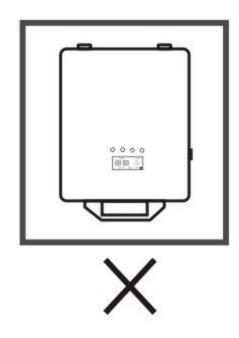

Clean the device

When the following happens, the device needs to be cleaned

- 1. You are going to change another essential oil to use;
- 2. The amount of atomizing is getting weaker and weaker;

Cleaning steps

- 1. Unplug the atomizing nozzle and twist the oil bottle;
- 2. Pour appropriate amount of alcohol into the oil bottle, install it on the device to work 5-10 times to prevent cross-odor;
- 3. End the cleaning after drying.

Troubleshooting

Before preparing to repair the machine, first try to solve the problem according to the following methods.

Problem	Solution
No fogging	 Check whether the air outlet seal is damaged. Check whether the device is in "OFF" state. Check whether the air pump is working, or replace the atomizing nozzle. Check whether the air pipe connected to the air pump is sealed or damaged.
Small fog	 Check whether the air outlet seal is damaged. Check whether the atomizing nozzle is blocked. Check whether the atomizing nozzle inside is loose, or replace the atomizing nozzle.
Leak oil	1.Check whether the atomizing nozzle is damaged. 2.Check whether the gasket damaged need to replace. 3.Check whether the essential oil bottle and the atomizing head are parallel or tighten.
Abnormal noise	 Check if the air pump is loose, then fix the air pump again. Check whether the air pump is damaged, replace with a new air pump.

After-sales service

- ◆ The equipment is guaranteed within one year from the date of sale, but it does not guarantee the vulnerable parts such as the casing, wires and external pipes, and the damage caused by man-made or accidents is not covered by the warranty. If the warranty period is exceeded, the maintenance will be paid
- ◆ If you encounter any after-sales problems, you can contact the authorized sales service providers in various regions, or contact our sales center directly.