

## Preparation work of ultrasonic welder

To run the machine,

**extra device and component are required.**

1) An air compressor



2) Air hose




3) hose reducer/adaptor

When the size of the air hose of the ultrasonic welding machine is different from that of the air compressor, you may need to select a suitable hose reducer/adaptor. The adapter is to joint the two different hose.(Dizo ultrasonic welder needs a hose with 8mm outer diameter and this 8mm diameter hose will be sent together with the ultrasonic welder. )




Finally, it will be like this:

A. ultrasonic welder+hose+air compressor

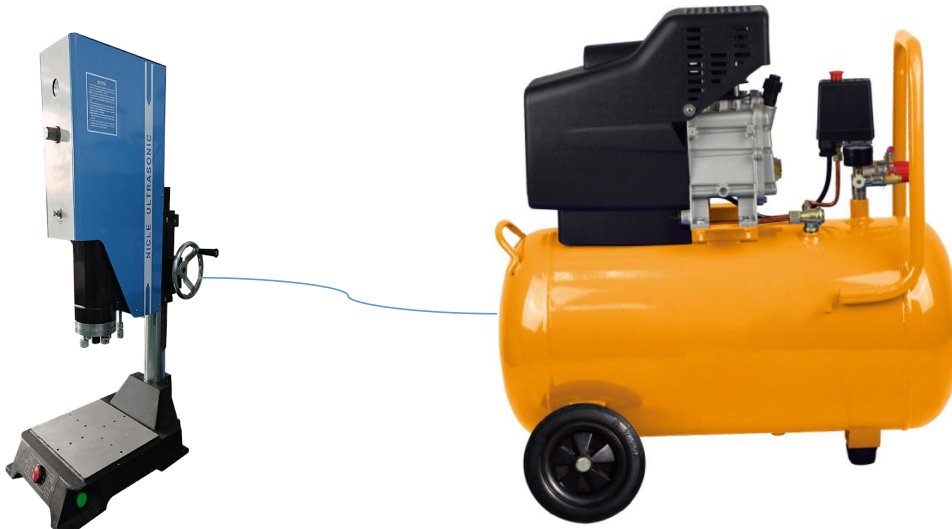

B. ultrasonic welder+hose1+hose reducer+hose2+air compressor

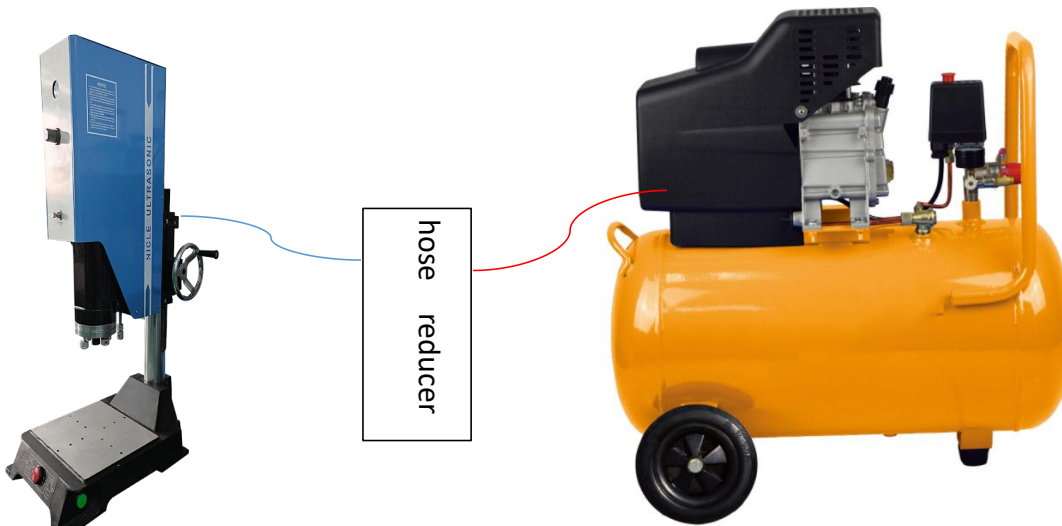

4) The ultrasonic welder requires 220V supply. If the user do not have 220V supply on site,

it's suggested for him to take following measures.

- A. Ask an electrician for help about 220V power supply
- B. If electrician not available. Just choose a suitable power transformer.



C. Meanwhile, in order to facilitate your localized use, we also prepared different power cords for you to choose. Please go with power cord selection with our sales team when you place the order.

For technical support, please contact Sr. customer service specialist Jenny by

[jenny@nicle.cn](mailto:jenny@nicle.cn)