

KEYS

Code	For	L
0642 981 771 804	ER16	150
0642 981 771 817	ER20	170
0642 981 771 820	ER25	190
0642 981 771 832	ER32	240
0642 981 771 845	ER40	270
0642 981 771 858	ER50	340



For standard ER nuts

Code	For	L
0642 981 770 056	ER11	95
0642 981 770 104	ER16	119
0642 981 770 206	ER20	131
0642 981 770 308	ER25	143



For mini ER nuts

Code	For	SW	L
0642 981 771 921	ER11	17	125
0642 981 771 950	ER16	25	170
0642 981 771 975	ER20	30	180
0642 981 771 934	DA180	36	200



For exagonal nuts

Code	For	L
0642 981 772 013	EOC16	180
0642 981 772 026	EOC20	204
0642 981 772 039	EOC25	227
0642 981 772 041	EOC32	252
0642 981 771 067	EOC40	320



For standard EOC nuts
