


Automatic Sensor & Kick Sensor Waste Bin



Please Read The Instruction Before Use

Display



Installing Process

Step 1: Check All Parts

Take out lid and inner barrel, make sure the power switch face to you.



Step 2: Install Batteries

1.For AA Battery

Take out the battery case , install 4 pieces of AA batteries into the case according to "+" "-" instruction, then put back the case and seal the cover.



2.For Lithium Battery

Use USB line to charge the lithium battery, power light changes from red to green in around 4 hours to indicate full power.



Step 3:
Open The Power Switch

Press the power switch at back side of lid to "I", automatic sensor system starts to work.



Step 4:
Instructions of Sensing Function

When rubbish or any part of you body is in sensing area(about 15-25cm), lid will open automatically. After leaving the sensing area, display screen would show 5 seconds countdown. Lid will close after the countdown ends.



Step 5:
Instructions of Kicking Function

When you kick at or knock on any part of the waste bin, lid will open automatically. After leaving the sensing area, display screen would show 5 seconds countdown. Lid will close after the countdown ends.



Touch Button

1. Press the OPEN/CLOSE button on the screen to keep the lid on the open state.

2. Press it again to close the lid. After you press the OPEN/CLOSE button, the lid will close automatically after 5 seconds if no object was sensed.



Precautions

1.When you install batteries, please take note of the "+" "-" instruction.

2.Be sure to use neat cloth to clean the trash bin. Please do not flush the trash bin. Water can damage inner electric elements. Do not power on If water goes inside trash bin.

3.Please do not push or flip the lid to prevent lid from damage.

4.When power uses up, please replace batteries in time to avoid liquid leaking. This situation may damage the electric elements.

5.Avoid to use trash bin under sunlight or wet surroundings.

6.Keep sensing area clean to ensure sensor functions normally.

7.Please don't mix acidic batteries and alkaline batteries, and also do not mix rechargeable batteries and disposable batteries.

8.Please don't repair trash bin or replace elements by yourself. Damages for these reasons are not included in warranty range.

Troubleshooting

Trouble	How to solve
Lid unusual open	Check whether batteries are installed properly according to "+" "-" instruction or check whether lithium battery incurs low power, and then re-open the power source switch.
	Check whether sensing area is clean or not, please use neat cloth to wipe if it is dirty.
Lid unusual close	Check whether sensing area is clean or not, please use neat cloth to wipe if it is dirty.
	Check whether electric circuits are damp, if yes, please do not connect power source. You can only use the bin if it is dry.
	Check whether there is any obstructor around the lid, if yes, please remove it.
Lid opens slowly	Dry battery may incur low power, please replace it.
	Lithium battery may incur low power, please recharge it in time.
Note: If these solution do not work, please contact sales branch in time. Do not repair trash bin by yourself.	

Maintenance record

Date	Cause of Failure	Recorder