LED 250W Zoom Moving Head 3-in-1





User Manual



SAFETY INSTRUCTIONS



CAUTION

Becareful with your operations. With a dangerous voltage you cansuffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



IMPORTANT

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device.

Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

The device shall only be used with rate voltage and frequency.

Make sure that the available voltage is not higher than stated at the end of this manual. Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell or smell may arise. This is a normal process and does not necessary mean that the device is defective, it should decrease gradually. Please don't project the beam onto combustible substances.

Fixtures cannot be installed on combustible substances, keep more than 50cm distance with wall for smooth air flow, so there should be no shelter for fans and ventilation for heat radiation


If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer of his service agent or a similar qualified person in order to avoid a hazard.

2 UNPACKING

Thank you for choosing our LED 250W moving head light. For your own safety, please read this manual before installing the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual well for future needs.

The LED 250W is made of a new type of high temperature strength of engineering plastic and cast aluminum casing with nice outlook. The fixture is designed and manufactured strictly following CE standards, complying with international standard DMX512 protocol. It's available independently controlled and linkable with each other for operation. And it is applicable for large-scale live performances, theater, studio, nightclubs and discos.

The 250W Moving head light which features high brightness and stability. Please carefully unpack it when you receive the fixture and check whether it is damaged during the transportation. And please check whether the following items are included inside the box:

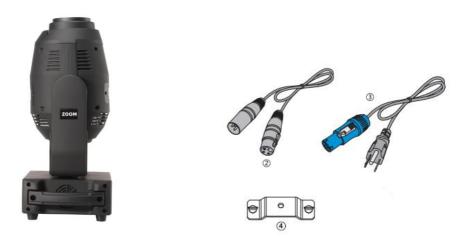



1	Moving Head	1PC
2	Signal Cable	1PC
3	Power Cable	1PC
4	Omega Clamp	1PC
(5)	User Manual	1PC

3

FEATURES & SPECIFICATIONS

Features

- 250W High Output White LED
- 50,000 hours lifespan and low power consumption
- Zoom angle 5.5° ~30°, focus function
- · High light output,13300LUX@5M at White light zoom in,
- 950LUX@5M at White light zoom out
- Temperature protect function, when the internal Temperature is up to 40° then the fans begin to work, when the internal temperature is up to 70° and the brightness reduce half.
- Color Wheel: 7 colors +white, color fine tuning, rotation with variable direction and speed
- 1 Rotation Gobo Wheel: 7 gobos + white, wheel rotation and shake
- 1 Static Gobo Wheel: 8 gobos + white, wheel rotation and shake
- · Prism: 8-facet Prism, bi-directional rotatable at variable speeds
- Frost effect
- · High speed strobe effect with 1-25 flashers per second
- · Internal program available
- 16/18 DMX Channels USITT DMX-512
- DMX 512, master-slave and sound activated controllable or auto operation
- Colorful LCD display
- Efficient low noise fan cooling system
- PowerCon IN/OUT
- 3-pin & 5-pin XLR connectors IN/OUT

- Two 1/4 turn fastening Omega Clamps
- · IP 20 protection rating

Specifications

Input Voltage: AC90-260V 50/60Hz

Light Source: 250W High Output White LED

Control Signal: DMX 512, master-slave and sound activated or auto operation


Control Channel: 16/18 DMX Channels USITT DMX-512

Power Consumption: 350W

Dimensions: 320(L)*220(W)*480(H)mm Packing size: 365(L)*280(W)*600(H)mm Net Weight: 13.50kg,Gross Weight: 16.50kg

4

PHOTOMETRIC DATA

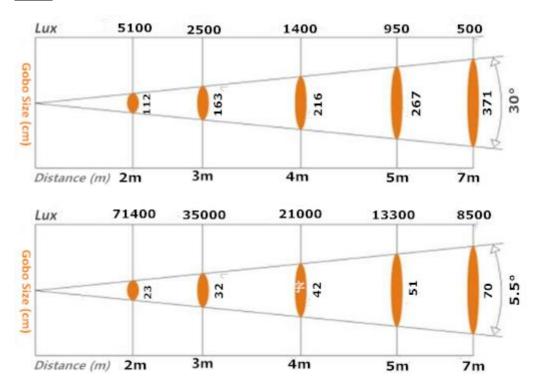

5 OPERATION INSTRUCTIONS

- The moving head is for spot effect for on-site decoration purpose.
- Don't turn on the fixture if it's been through severe temperature difference like after transportation because it might damage the light due to the environment changes.
 So make sure to operate the fixture until it is in normal temperature.
- This light should be keep away from strong shaking during any transportation or movement.
- Don't pull up the light by only the head, or it might cause damages to the mechanical parts.
- Don't expose the fixture in overheat, moisture or environment with too much dust when installing it. And don't lay any power cables on the floor. Or it might cause electronics shock to the people.
- Make sure the installation place is in good safety condition before installing the fixture.
- Make sure to put the safety chain and check whether the screws are screwed properly when installing the fixture.
- Make sure the lens are in good condition. It's recommended to replace the units if there are any damages or severe scratch.
- Make sure the fixture is operated by qualified personnel who know the fixture before using.
- · Keep the original packages if any second shipments is needed.
- Don't try to change the fixtures without any instruction by the manufacturer or the appointed repairing agencies.
- It is not in warranty range if there are any malfunctions from not following the user manual to operate or any illegal operation, like shock short circuit, electronic shock, lamp broke, etc.

6 INSTALLATIONS

Cautions: For added protection mount the fixtures in areas outside walking paths, seating areas, or in areas were the fixture might be reached by unauthorized personnel.

Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 items the device's weight.

Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.

Never stand directly below the device when mounting, removing, or servicing the fixture.

From a ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5ft) away from any flammable materials (decoration etc.).


Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Mounting points: Overhead mounting requires extensive experience, including amongst others calculating working load limits, a fine knowledge of the installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.

Clamp Mounting: The LED moving head provides a unique mounting bracket assembly that integrates the bottom of the base, and the safety cable rigging point in one unit (see the illustration below). When mounting this fixture to truss be sure to secure an appropriately rated clamp to the included omega bracket using a M10 screw fitted through the center hole of the "omega bracket". As an added safety measure be

sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly.

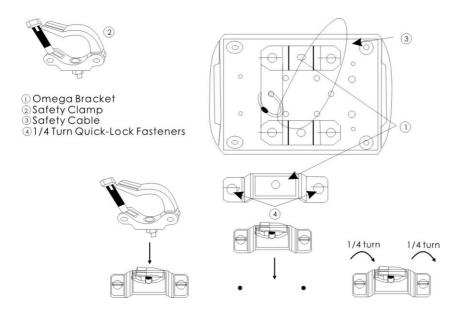


Regardless of the rigging option you choose for your LED moving head, always be sure to secure your fixture with a safety cable. The fixture providers a built-in rigging point for a safety cable on the hanging bracket as illustrated above. Be sure to only use the designated rigging point for the safety cable and never secure a safety cable to a carrying handle.


7

DMX-512 CONTROL CONNECTIONS

Connect the provided XLR cable to the female 3-pin XLR & 5-pin XLR output of your controller and the other side to the male 3-pin XLR & 5-pin XLR input of the moving head. You can chain multiple moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

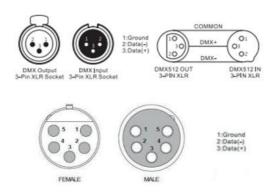


For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

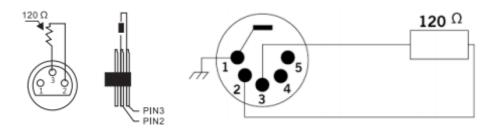


8

MENU OPERATIONS



MENU

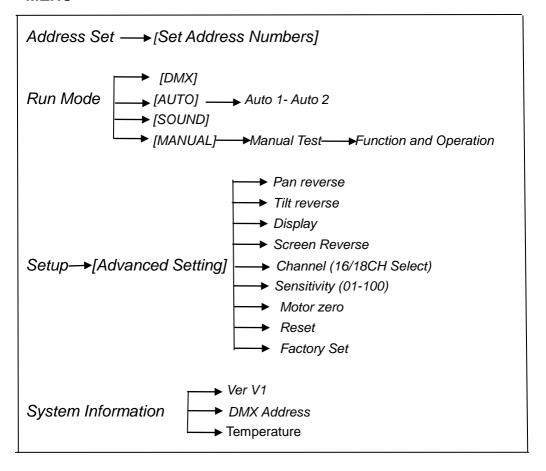

9 DMX CHANNELS

18/16 channel mode sheet

18CH	16CH	Function	Channel Value	Description
CH1	CH1	Pan	0-255	0-540°
CH2		Pan fine	0-255	Pan Fine
СНЗ	CH2	Tilt	0-255	0-270°
CH4		Tilt Fine	0-255	Tilt Fine
CH5	СНЗ	X, Y speed	0-255	From fast to slow
СН6	CH4	LED Dimmer	0-255	From dark to bright
			0-7	Turn on
CH7 CH5	CH5	LED Strobe	8-250	Strobe from slow to fast
			251-255	Turn on
			0-15	White Lighting
			16-31	Color 1
			32-47	Color 2
			48-63	Color 3
CH8	CH6	7 color +	64-79	Color 4
СПо		White	80-95	Color 5
			96-111	Color 6
			112-127	Color 7
			128-191	CW from slow to fast
			192-255	CCW from slow to fast
CHO	CH7	Color effect	0-10	No function
СПЭ			11-209	Color fine tuning

CH10 CH8 CH8 Static gobo wheel T-13 CH8 Static gobo wheel CH10 CH8 CH8 CH8 CH8 CH8 CH8 CH8 CH				I	
CH10 CH8 Static gobo wheel T-17 Gobo 3 28-34 Gobo4 35-41 Gobo5 42-48 Gobo6 49-55 Gobo7 56-63 Gobo 8 64-70 Gobo 8 shake 71-77 Gobo 7 shake 78-84 Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo 1 CH11 CH9 7 rotation gobos +White 13-47 Gobo2 48-63 Gobo3 Gobo4 80-95 Gobo5				210-255	Color shake from fast to slow
CH10 CH8 CH8 Static gobo wheel Fig. 10-27 Gobo3 28-34 Gobo4 35-41 Gobo5 42-48 Gobo6 49-55 Gobo7 56-63 Gobo 8 64-70 Gobo 8 shake 71-77 Gobo 7 shake 78-84 Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo 1 shake 192-255 Gobo rotate CW from slow to fast 192-255 Gobo rotate CW from slow to fast 192-255 Gobo 1				0-6	open
CH10 CH8 CH8 Static gobo wheel CH8 Static gobo wheel CH10 CH8 CH8 Static gobo wheel CH8 Static gobo wheel T1-77 Gobo 8 G4-70 Gobo 8 shake Gobo 6 shake B5-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CW from slow to fast 192-255 Gobo 1 CH11 CH9 T rotation gobos HWhite T6-31 Gobo 2 48-63 Gobo 3 Gobo 4 Gobo 6 Gobo 7 From Slow to fast Gobo 7 From Slow to fast Gobo 7 From Slow to fast Gobo 1 Gobo 1 Gobo 1 Gobo 1 Gobo 2 Gobo 3 Gobo 3 Gobo 3 Gobo 4 Gobo 6 Gobo 7 From Slow to fast Gobo 1 Gobo 1 Gobo 1 Gobo 1 Gobo 2 Gobo 3 Gobo 3 Gobo 3 Gobo 3 Gobo 3 Gobo 4 Gobo 5 Gobo 5				7-13	Gobo1
CH10 CH8 Static gobo wheel Static gobo wheel CH8 Static gobo wheel CH8 Static gobo wheel T1-77 Gobo 7 shake 78-84 Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 Open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo 7 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 Open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CW from slow to fast 192-255 Gobo 3 shake 106-112 Gobo 2 shake 13-119 Gobo 1 shake 120-127 Open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CW from slow to fast 192-255 Gobo 7 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 Open 128-191 Gobo 1 shake 192-255 Gobo rotate CW from slow to fast 192-255 Gobo 7 shake 106-112 Gobo 2 shake 13-119 Gobo 1 shake 120-127 Open 128-191 Gobo 1 shake 120-127 Open 128-191 Gobo 1 shake 192-255 Gobo 7 shake 106-112 Gobo 2 shake 106-112 Gobo 1 shake 106-112 Gobo 2 shake 106-112 Gobo 2 shake 106-112 Gobo 3 shake 106-112 Gobo 3 shake 106-112 Gobo 4 shake 106-112 Gobo 2 shake 106-112 Gobo 3 shake 106-112 Gobo 2 shake 106-112 Gobo 3 shake 106-112 Gobo 2 shake 106-112 Gobo 3 shake 106-112 Gobo 1 shake 106-112 Gobo 2 shake 106-112 Gobo 2 shake 106-112 Gobo 3 shake 106-112 Gobo 1 shake 106-112 Gobo 2 shake 106-112 Gobo 3 shake 106-112 Gobo 3 shake 106-112 Gobo 3 shake 106-112 Gobo 1 shake 106-112 Gobo 1 shake 106-112 Gobo 2 shake 106-112 Gobo 3 shake 106-112 Gobo 1 shake 10				14-20	Gobo2
CH10 CH8 CH8 Static gobo wheel CH8 Static gobo wheel CH10 CH8 Static gobo wheel CH8 Static gobo wheel CH8 Static gobo wheel CH9 Static gobo wheel CH9 Static gobo wheel CH70 Gobo 8 shake Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 Open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo 1 Static gobo 16-31 Gobo 1 32-47 Gobo 2 48-63 Gobo 3 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Sobo 7 Sobo 8 Sobo 1 Sobo 2 Sobo 3 Gobo 3 Gobo 3 Gobo 3 Gobo 3 Gobo 4-79 Gobo 4 Sobo 5 Sobo 5				21-27	Gobo3
CH10 CH8 Static gobo wheel CH9 CH8 Static gobo wheel CH9 CH9 CH8 Static gobo wheel CH9 CH9 CH9 CH8 Static gobo wheel CH70 CH8 Static gobo wheel CH70 CH70 CH70 CH70 CH70 CH70 CH8 Static gobo wheel CH70 CH70 CH70 CH70 CH8 CH8 Static gobo wheel CH70 CH70 CH70 CH70 CH8 CH70 CH70 CH8 CH8 CH8 CH8 CH8 CH8 CH8 CH				28-34	Gobo4
CH10 CH8 CH8 Static gobo wheel CH8 Static gobo wheel CH8 Static gobo wheel CH9 T1-77 Gobo 8 shake Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo 1 CH11 CH9 Totation gobos white Totation white Totation gobos white Totation gobos white Totation white Totation gobos white Totation white Totation white Totation white Totation gobos white Totation white T				35-41	Gobo5
CH10 CH8 Static gobo wheel Static gobo wheel CH8 Static gobo wheel T1-77 Gobo 7 shake 78-84 Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo 1 CH11 CH9 T rotation gobos +White Totation gobos +White Totation gobos 16-31 Gobo1 32-47 Gobo2 48-63 Gobo3 64-79 Gobo4 80-95 Gobo5				42-48	Gobo6
CH10 CH8 Static gobo wheel F1-77 Gobo 7 shake 78-84 Gobo 6 shake 85-91 Gobo 3 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo 1 CH11 CH9 Totation gobos +White F1-71 Gobo 2 48-63 Gobo 3 64-79 Gobo 4 80-95 Gobo 5				49-55	Gobo7
CH10 wheel 71-77 Gobo 7 shake 78-84 Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo 1 CH11 CH9 7 rotation gobos +White 7 rotation Gobo 1 Gobo 1 Gobo 1 Gobo 2 Gobo 3 Gobo 3 Gobo 3 Gobo 3 Gobo 4 Gobo 6 shake Gobo 4 shake 99-105 Gobo 2 shake 113-119 Gobo 1 shake 120-127 Open Gobo 1 Gobo 2 Gobo 3 Gobo 3 Gobo 3 Gobo 3 Gobo 3 Gobo 4 BO-95 Gobo 5				56-63	Gobo 8
Wheel 71-77 Gobo 7 shake 78-84 Gobo 6 shake 85-91 Gobo 5 shake 92-98 Gobo 4 shake 99-105 Gobo 3 shake 106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo 1 shake 120-127 Open 128-191 Gobo rotate CCW from slow to fast 192-255 192-25	CU10	CH8	Static gobo	64-70	Gobo 8 shake
S5-91 Gobo 5 shake	СПІО		wheel	71-77	Gobo 7 shake
92-98 Gobo 4 shake				78-84	Gobo 6 shake
99-105 Gobo 3 shake				85-91	Gobo 5 shake
106-112 Gobo 2 shake 113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-255 Gobo rotate CCW from slow to fast 192-256 Gobo rotate CCW from slow to fast 192-257 Gobo rotate CCW from slow to fast 192-258 Gobo rotate CCW from slow to fast 192-259 Gobo rotate CCW from slow to fast 192-259 Gobo rotate CCW from slow to fast 192-259 Gobo rotate CCW from slow to fast 192-250 Gobo rotate CCW from slow to fast 192-				92-98	Gobo 4 shake
113-119 Gobo 1 shake 120-127 open 128-191 Gobo rotate CW from slow to fast 192-255 Gobo rotate CCW from				99-105	Gobo 3 shake
120-127 Open				106-112	Gobo 2 shake
128-191 Gobo rotate CW from slow to fast				113-119	Gobo 1 shake
CH11 CH9 7 rotation gobos +White 16-31 Gobo 2 Gobo 48-63 Gobo 5 Gobo 64-79 Gobo 64-79 Gobo 64-79 Gobo 64-79 Gobo 64-79 Gobo 65-64-79 Gobo 65-6				120-127	open
CH11 CH9 7 rotation gobos 16-31 Gobo1 +White 32-47 Gobo2 48-63 Gobo3 64-79 Gobo4 80-95 Gobo5				128-191	Gobo rotate CW from slow to fast
gobos +White 16-31 Gobo1 32-47 Gobo2 48-63 Gobo3 64-79 Gobo4 80-95 Gobo5				192-255	Gobo rotate CCW from slow to fast
+White 32-47 Gobo2 48-63 Gobo3 64-79 Gobo4 80-95 Gobo5	CH11	СН9	7 rotation	0-15	open
32-47 Gobo2 48-63 Gobo3 64-79 Gobo4 80-95 Gobo5			-	16-31	Gobo1
64-79 Gobo4 80-95 Gobo5			+White	32-47	Gobo2
80-95 Gobo5				48-63	Gobo3
				64-79	Gobo4
96-111 Gobo6				80-95	Gobo5
				96-111	Gobo6

			112-127	Gobo7
			128-191	Gobo Rotate CW from slow to fast
			192-255	Gobo Rotate CCW from slow to fast
CH12			0-15	open
		Gobo Rotation	16-95	Gobo Fine 0-250
			96-135	Gobo Rotating 0-90
	CH10		136-155	Gobo Rotating 0-250
			156-175	Gobo Rotating 0-360
			176-215	Gobo self-rotating CW from slow to fast
			216-255	Gobo self-rotating CCW rotating from
			∠10-∠55	slow to fast
CH13	CH11	Focus	0-255	Gobo hazy to clear
CH14	CH12	ZOOM	0-255	Angle from narrow to wider
01145		Prism	0-63	Open
CH15	CH13		64-255	Prism In
			0-15	open
			16-95	Prism Fine 0-250
			96-135	Prism Rotating 0-90
	H16 CH14	CH14 Prism	136-155	Prism Rotating 0-250
CH16		Rotation	156-175	Prism Rotating 0-360
			176-215	Prism self-rotating CW from slow to fast
			216-255	Prism self-rotating CCW rotating from slow to fast
CH17		Frost	0-63	open
	CH15		64-255	Frost effect
01.14.0	CH16	self-setting	0-7	No action
CH18		Program	8-131	Auto mode

132-249	Soud mode
250-253	Reset
254-255	No action

10 MAINTENANCE AND CLEANING

The following points have to be considered during the inspection:

1) All screws for installing the devices or parts of the device have to be tightly connected and

must not be corroded.

2) There must not be any deformations on the housing, color lenses, fixations and installation

spots (ceiling, suspension, trussing).

3) Mechanically moved parts must not show any traces of wearing and must not rotate with

unbalances.

4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION

Disconnect from mains before starting maintenance operation.



In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.

- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint-free cloth. Never use alcohol solvents.

There are no serviceable parts inside the device. Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine parts from your local dealer.